

Printing with the Epson R280 Inkjet Printer

Before printing, size image for print media and save

A. File > Print

1. Under “Printer” choose Stylus Photo R280

INCLUDEPICTURE "Image_0" * MERGEFORMAT

2. Select proper orientation using Page Setup and then click “Print”

INCLUDEPICTURE "Image_1" * MERGEFORMAT

B. Change the print window options to the following

1. **Printer:** Stylus Photo R280
2. **Presets:** Standard
3. Change **Layout** to "Print Settings"

INCLUDEPICTURE "Image_2" * MERGEFORMAT

4. Change **Media Type** to "match paper type" or something like "Premium Photo Paper Glossy"
5. Change **Mode** to “Advanced”
6. Change **Print Quality** to “Photo RPM”
7. Uncheck “High Speed”
8. Insert paper into printer, glossy/luster side up and click “Print”